


B2 預校洗衣時間按鈕

此程式可讓你預設在指定的時間內完成洗衣程序或讓你在 3/6/9 小時內延遲開始程式。

請根據下列步驟進行延遲開始程式：

- 轉動程式選擇旋轉按鈕 (A) 選擇所需的程式
- 按下預校洗衣時間按鈕，直至指示燈亮起
- 再按啟動/暫停按鈕  (H)
- 選擇預設時間後，洗衣機將會在預設的指定時間內啟動

如果想取消預校洗衣時間，可根據下列步驟：

輕按一下按鈕及持續 5 秒，直至顯示器出現已輸入的程式數據，這時便可按一下啟動/暫停按鈕來繼續程式或轉動程式選擇旋轉按鈕至關機模式 OFF 來取消已輸入的程式數據，便可再次選擇新的設定。

V 清洗過程指示燈 (V)

擁有此指示燈的型號能於清洗過程中顯示剩餘的洗衣時間與及洗衣過程的即時狀況，唯清洗時間可能會有不同，這取決於所選的水溫，水壓，洗衣量和程式選擇。

G 鎖上機門顯示燈

鎖上機門顯示燈將於洗衣過程維持亮燈的狀態，由這時開始代表機門已上鎖 (DOOR LOCK)。

為防止機門開啟，DOOR LOCK 亮燈的狀態直至清洗過程結束為止。

清洗過程結束後，指示燈將會自動熄滅，此時便打開機門取出衣物。

更改及取消清洗程式

如果想更改或取消已選擇之洗衣程式，可根據下列步驟：

- 轉動程式選擇旋轉按鈕至關機 OFF 模式來取消已輸入的程式數據，便可再次選擇新的程式。
 - 選擇新的清洗程式
 - 再按一下啟動/暫停按鈕 (H) 直至新程式的指示燈亮起
- 新的洗衣程式便會啟動。

暫停程式

若想在洗衣過程中加添衣物進行清洗，可以暫時停止洗衣過程，並根據下列步驟：

- 按下啟動/暫停按鈕後(H)，直至按鈕旁邊的指示燈開始閃爍，新程式指示燈將會亮起
- 約 2 分鐘後，鎖上機門顯示燈熄滅，此時便打開機門加添衣物
- 正確地關上洗衣桶門及洗衣機上蓋
- 再次按下啟動/暫停按鈕，新的洗衣程式便會啟動。

當清洗過程結束，所有程式指示燈及鎖上機門顯示燈將會熄滅


在開啟洗衣桶及洗衣機上蓋前，轉動程式選擇旋轉按鈕至關機 OFF，才打開機門提取衣物。



43011353

28.09.15 / H-43011353 ZH

洗衣機 EVOT 10061D3

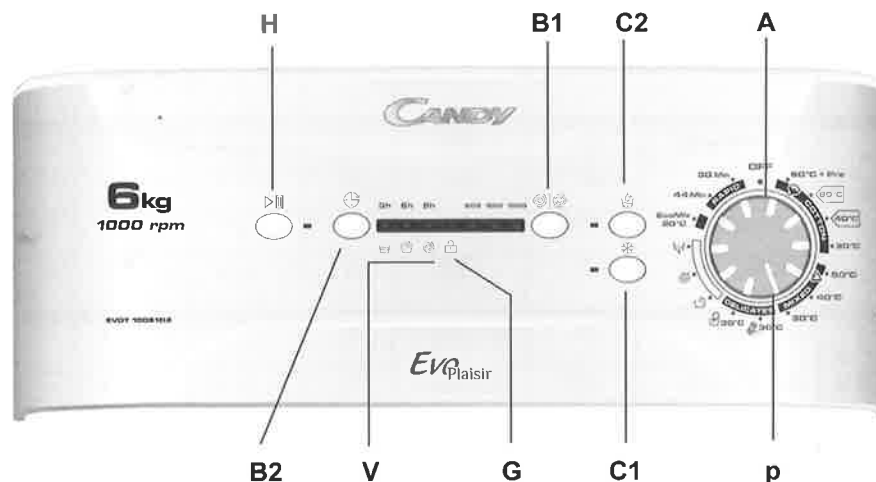

A 程式選擇旋轉按鈕

使用此旋轉按鈕來選擇所需的洗滌程式。轉動按鈕（它可以順時針或逆時針轉動）選擇最合適的洗滌程式 (p)，水溫將因應所選的程式而定。(請參閱程式表)。

B1 脫水轉速選擇按鈕

B2 預校洗衣時間按鈕

C1 冷水洗衣按鈕 *

C2 防敏額外水量功能按鈕

G 鎖上機門顯示燈

H 啟動/暫停按鈕

p 程式控制指示

V 洗衣過程指示燈

這款洗衣機擁有一個裝置，以確保所述洗衣桶是右側的，並適合於所選擇的程式完成後加載/卸載衣物時選用。

EVOT 10061D3 程式表

程式	程式類別	最高溫度設定 °C	最高脫水轉速 轉/分鐘	最大洗衣量 公斤	洗衣劑及添加劑			程式類別	
					I	II	☼	*	👤
棉質	預洗顏色衣物	90°	1000	6	•	•	•	•	•
	*顏色衣物	60°	1000	6		•	•	•	•
	*顏色衣物	40°	1000	6		•	•	•	•
	纖幼顏色衣物	30°	1000	6		•	•	•	•
合成纖維	顏色衣物	50°	指示燈顯示	2		•	•	•	•
	纖幼顏色衣物	40°	指示燈顯示	2		•	•	•	•
	纖幼顏色衣物	30°	指示燈顯示	2		•	•	•	•
纖幼衣物	👤 羊毛衣物	30°	指示燈顯示	1		•	•	•	
	👤 手洗程序	30°	指示燈顯示	2		•	•	•	
特別程式	👤 輕柔沖洗		指示燈顯示				•		•
	👤 輕柔脫水		1000						
	👤 排水								
	20°C 綜合洗衣程序	20°	指示燈顯示	6	•	•	•	•	
	44 分鐘特快速洗	40°	指示燈顯示	3	•	•	•	•	
	30 分鐘特快速洗	30°	指示燈顯示	2	•	•	•	•	

*棉質清洗程式符合歐盟 1015/2010 標籤說明，並按照歐盟 e n° 1061/2010 條例所規定的正常條件下測量而獲得。

◁60°C 棉質清洗程式

◁40°C 棉質清洗程式

上述的清洗程式適用於帶有污漬的棉質衣物，能提供最有效的能源效率和用水效益。

由於供水壓力和溫度以及洗衣量和衣物類型的不同，各家庭的能源和用水消耗與能源標籤及用水效益標籤中的資料可能會有不同。

EVOT 10061D3

主要技術參考數據

主要電壓	保險絲規定電流	水壓要求	最高輸出功率
220-230V, 50 Hz.	10 A.	0,05-0,8 Mpa	1500

洗衣過程

- 👤 清洗
- 👤 沖水
- 👤 脫水/排水

請注意：液體清潔劑不適用於預洗程序或預校洗衣時間程式

洗衣準備：

- (1) 將衣物放入洗衣機，關閉洗衣桶並檢查是否上鎖
- (2) 將洗衣劑和添加劑倒入洗劑容格，並不要超過最高份量指標
 - 預洗程序 I 及 清洗程序 II - 洗衣劑
 - ☼ - 衣物柔順劑

選擇所需程式及類別

- (3) 將程式選擇旋轉按鈕 (A) 轉到所需程式
- (4) 按下所需功能選擇 (C1, C2)
 - 建議在按下啟動按鈕(H)前選擇所需的功能程式
 - 選擇所需的特別功能時再按下另一個功能程式，該功能程式在相應程式步驟未執行前將不能應用

C1 冷水洗衣 按鈕 *

按下這個按鈕，每一個洗衣程式都可轉換成冷水洗滌，但又不影響其他功能（如水量，時間，轉速等）。窗簾，小地毯，人造纖維物料，白色衣物都可選用此功能來清洗。

C2 防敏額外水量功能按鈕 👤

全靠最新的 SAS 系統，按下這個功能按鈕，即可以進行一個特別的洗滌過程，並適用於所有的程式和不同類型的衣物，額外水量能加倍保護衣物纖維和呵護用戶的嬌嫩皮膚。增加洗滌時的額外水量與及全新的滾動旋轉模式，令洗衣過程時產生更大的噴射動力，進一步提升清潔效果，讓衣物沖洗得更徹底。過水時增加額外水量可以徹底清除殘留在衣服纖維上的洗衣劑，減少對過敏皮膚的影響。

此功能最適合洗滌對不同程度敏感皮膚人士的衣物，確保洗衣劑殘餘不留在衣服上，減輕其中一個主要致敏因素。

建議選用此功能來洗滌嬰兒及兒童的纖幼衣物，特別是浴袍及浴巾這些比較容易積存洗衣劑殘餘的衣物類別。

此功能並不適用於清洗羊毛衣物。

B1 脫水轉速選擇按鈕 🕒🕒

你可按下此按鈕來選擇最合適的脫水轉速，但僅限於已選擇的洗衣程式範圍內可接受的速度。所有轉速已陳列於控制面板上，連續按下直至三款脫水速度指示燈開始閃爍為止🕒。你可以於洗衣過程中隨時轉換合適的脫水轉速。

- (5) 選擇所有功能程式後，按啟動/暫停按鈕 🕒 (H)，洗衣機便會即時操作，此外剩餘洗衣時間會顯示於程式控制指示器上(V)，指示燈提示剩餘的洗衣時間，並於洗衣過程中不斷更新。若你想取消已選擇的程式，再按一下新的程式按鈕。(按鈕旁邊的指示燈將會熄滅)

Time remaining to end of cycle or programme phase display (V).

Models with this feature display the APPROXIMATE time remaining to the end of the programme in minutes, or the current wash phase of the programme set. The programme times may vary depending on the temperature selected, ambient temperature, mains water pressure, the quantity and type of washing.

“Door lock” lamp (G)


The door lamp flashes when a wash programme starts, and then burns steadily. From that moment on the door is locked (DOOR LOCK).

The DOOR LOCK lamp remains on during the whole wash cycle, thus preventing the door from opening.

At the end of the wash cycle, the safety devices are deactivated, the light goes out and the door can then be opened.


Cancel-change programs

Once you have started a program, and wish to change or cancel it, you should proceed in the following manner,

- Put the program selector in the OFF position. At that instant, you have cancelled the program and can if you wish to do so, select a new one.
- Select the new program.
- Press the  (H) key until one of the programme phase lights turns on. The washing machine will perform the new selected program.

Programme Pause

To pause the wash programme so that more washing can be added, proceed as follows:

- Press the (H) key until the lights on the option keys and the programme phase light have turned on.
- When the Door Lock lamp goes out (after approx. 2 minutes), open the door and put the additional washing into the drum.
- Close the drum door and the lid properly.
- Press the start key  (H), the time remaining lamp will light up and the machine will continue with the programme.

At the end of the programme, all the programme phase lights will be lit up, and safety door light will shut off.


For your own safety, set the programme selector to OFF before opening the washing-machine lid and the drum doors to remove the washing.



43011353

28.09.15 / H - 43011353 EN

WASHING MACHINE EVOT 10061D3-UK

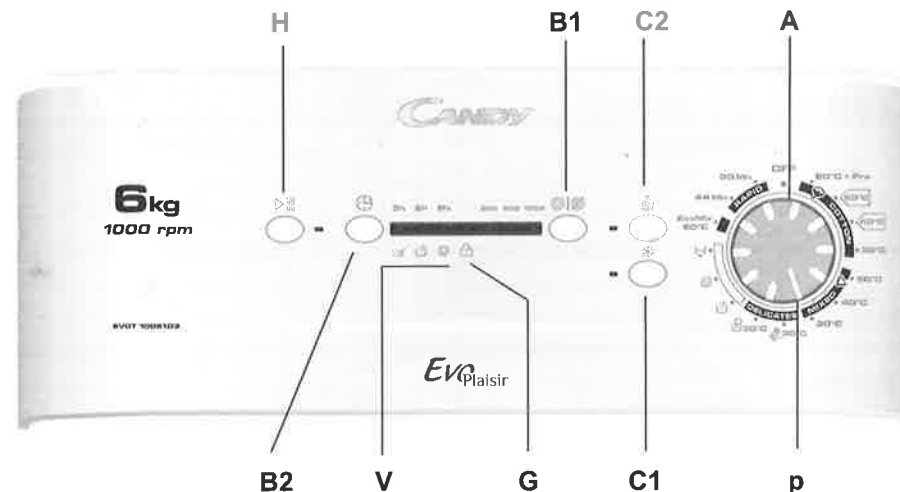


A PROGRAMME/TEMPERATURE SELECTOR

Use this control to select the desired wash programme. Turn the selector (it can be turned in both directions) so that the programme is opposite the reference indicator (p). The temperature selected will depend on the programme. (See the Programme Table).

B1 SPIN SPEED SELECTOR 

B2 DELAYED START KEY 

C1 COLD WASH 

C2 AQUAPLUS (SENSITIVE KEY) 

G DOOR LOCK LAMP 

H START/PAUSE KEY 

p CONTROL POSITION INDICATOR

V PROGRAMME PHASES LAMPS

This washing machine has a device that ensures that the drum is right-side-up and ready for loading/unloading clothes when the selected programme is completed.

Programme table mod EVOT 10061D3-UK

programme	programme for	max. temp. setting °C	spin speed rpm/min	max. load Kg.	washing powder load			option keys C	
					I	II			
COTTONS	Fast coloureds with prewash	90°	1000	6	*	*	*	*	*
	* Fast coloureds	60°	1000	6		*	*	*	*
	* Fast coloureds	40°	1000	6		*	*	*	*
	Delicate coloureds	30°	1000	6		*	*	*	*
MIXED SYNTHETICS	Fast coloureds	50°	display	2		*	*	*	*
	Delicate coloureds	40°	display	2		*	*	*	*
	Delicate coloureds	30°	display	2		*	*	*	*
DELICATES	Woollens	30°	display	1		*	*	*	
	Hand wash	30°	display	2		*	*	*	
SPECIAL	Gentle rinse		display				*		*
	Gentle spin		1000						
	Empty								
	EcoMix 20°C	20°	display	6		*	*	*	*
	Rapid 44	40°	display	3		*	*	*	
	Rapid 30	30°	display	2		*	*	*	

* Cotton wash programme requirements according to (EU) 1015/2010 e n° 1061/2010 regulations

60° Cotton wash programme

40° Cotton wash programme

These wash programmes are recommended for soiled cotton fabrics and are the most effective in terms of both energy efficiency and water consumption.

These programmes have been designed to comply with the recommended wash temperatures specified on the labelling: the specified temperature may differ slightly from that indicated on the wash cycle.

Technical data mod. EVOT 10061D3-UK

Mains voltage	Mains fuse Amp. rating	Water pressure	Max. Power input
220-230V, 50Hz.	10 A.	0,05-0,8 Mpa	1500

programme phases

wash

rinse

spin-drain

IMPORTANT:

- Do not use liquid detergent for programs with a prewash cycle and/or timed start.

PREPARING THE WASH CYCLE

1.- Once the washing is loaded, ensure that the drum doors are properly closed..

2.- Add detergent and additives, not exceeding the maximum level indicator.

- detergent for pre-wash I
- detergent for wash programme II
- fabric conditioner

SELECTING THE DESIRED PROGRAMMES AND OPTIONS

3.- Turn the programme selector (A) to the desired programme.

4.- Press the key or keys for any options desired (C1, C2,).

- It is advisable to select the required options before pressing the Programme Start key (H).

- Remember that if the programme has already passed the stage at which an option is activated, that option will not be implemented.

C1 cold wash key

By pressing this button it is possible to transform every programme into a cold washing one, without modify other characteristics (water level, times, rythmes, etc..).

Curtains, small carpets, man made delicate fabrics, non coulor fast garments can be safely washed thanks to this new device.

C2 aquaplus (sensitive key)

Thanks to the new SENSOR ACTIVA SYSTEM, by pressing the key it is possible to run a special washing cycle applicable to all programs and types of fabric, caring for their fibres and the delicate skin of the users who use them.

Taking on much more water, together with the new combined action of drum rotation cycles and taking on and discharging water allow you to obtain perfectly clean, rinsed clothes. More water is used in the wash to dissolve the detergent completely, ensuring an effective washing action. The water in the rinses has also been increased to eliminate all trace of detergent in the fibres.

This function has been specifically studied for people with delicate, sensitive skin, who can suffer irritation or allergy from the slightest detergent residue.

It is also advisable to use this function for children's clothes and delicate fabrics in general, especially for washing bathrobes, whose fibres tend to retain detergent.

This option is not available for the wool program.

B1 spin selector key

You can use this key to select final spin speed, but only within the range of speeds of the programme selected. These speeds are displayed via the corresponding lamp. Press the button and keep pressed until the three speed indicator lights go out ().

You can select the desired speed at any time during the programme.

5.- Once you have selected the desired options, press the START key (H). The washing machine will start up and one of the time remaining lamps /programme phase (V) will come on. This lamp indicates approximately how much time is left before the wash programme is completed or the programme phase: it will change as the programme progresses. To cancel an option after setting, just press the option key again (the indicator lamp will go out).

B2 delayed start key

The washing machine can be set to start the programme selected 3, 6, or 9 hours after setting. To do this, proceed as follows:

- Select the desired programme via the programme selector A.
- Press the delayed start key until the desired delay indicator lamp lights up.
- Press the start/pause key (H).
- The washing machine will start up after the time selected.

If you prefer to cancel the programmed start-up time, press the (B2) key again until all the delay lights have switched off.